


The chassis attachment points are shown in the figure. The table specifies all of the components that make up each attachment. For more information see *Technical Information* (doc. nr. 96720-1) and *Spare Parts List* (doc. nr. 96740-1).

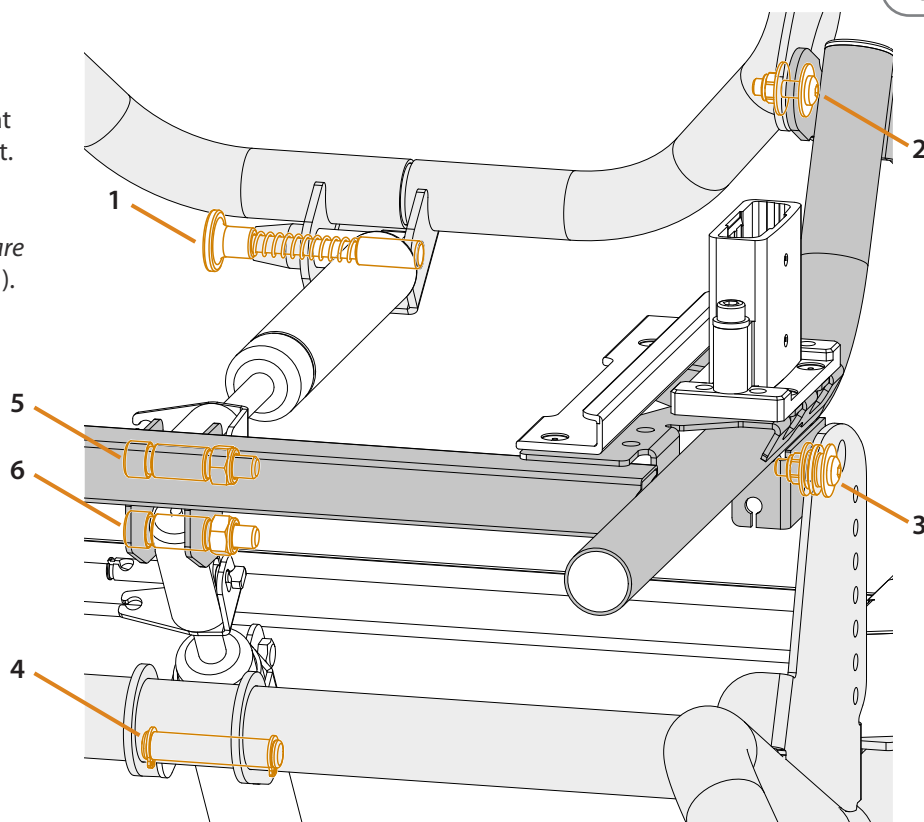

		Art. nr.	Description	Qty.
1 Back frame - Gas spring back		82312	Knob 22-M6	1
		81852	Spring back fold pin	1
		10221	Pin back fold	1
2 Back frame - Seat frame		81522	Locking nut M6	1
		81620	Washer NB 6x19x1	2
		35219-1	Bushing seat-back	1
		81355	Screw K6S M6x20	1
3 Seat frame - Wheel frame		81522	Locking nut M6	1
		81620	Washer NB 6x19x1	2
		35519	Bushing frame-seat	1
		81355	Screw K6S M6x20	1
4 Wheel frame - Gas spring tilt		81731	Circlip SGA 10	2
		37759-1	Pin tilt holder	1
5 Seat frame - Gas spring back		81247	Screw MC6S M8x40	1
		67716-4	Joint sleeve tilt	1
6 Wheel frame - Gas spring tilt		81523	Locking nut M8	1
		67716-6	Washer joint sleeve	2*

*Note:
Washers used only
when replacing a
gas spring before
serial number
23-00275 (2024).

Note: art. nr. 35992-7 Screw kit Joint MO includes: 81247, 67716-4, 81523, 67716-6 (2x).