


Harness mounts are intended to be used with chest harnesses, sternum supports, and other trunk harnesses that have four mounting straps.

The harness mounts consist of two adjustable mounts (A) for the upper straps and two fixed loops (B) for the lower straps.

The upper mounts can be adjusted in height and angle. Angle adjustment is used to set the spacing between the mounts.

Each lower mount is attached using one of the lower holes on the sides of the backrest system.

The harness mounts are suitable for straps with a maximum width of 25 mm.

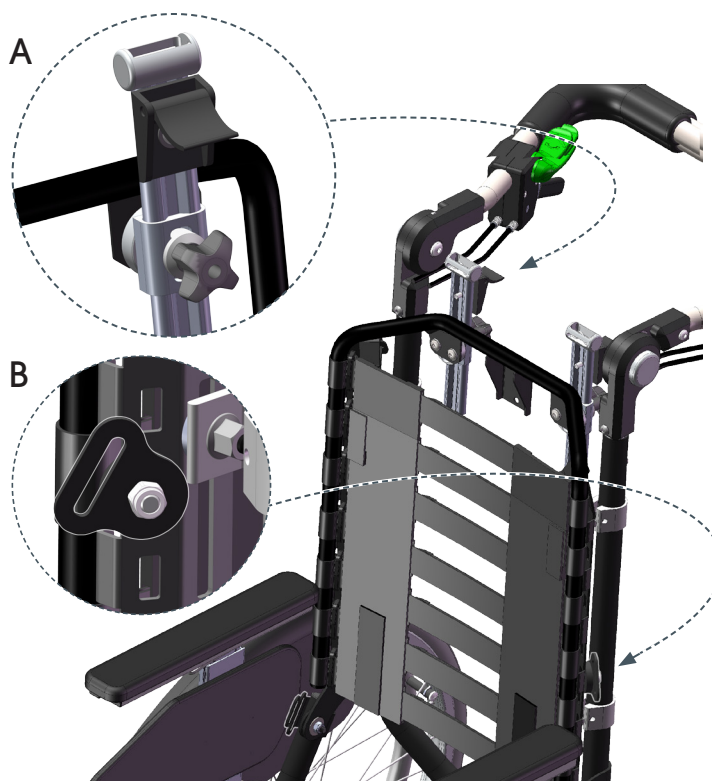


Measurements

The height setting of the upper mounts affects how far apart they can be set. The higher the mounts, the larger the total possible span. Height is measured from the upper edge of the backrest. See the Info Sheet *Backrest System* (doc. nr. 96905-1) for measurements of the backrest height.

Measurements listed in Table 1 apply to both Flexi-back and Solid back.

Table 1 - Measurements [cm]

Model	Seat width	Seat width
	30	34
a max highest pos.	17	21
b min highest pos.	10	14
c max lowest pos.	15	19
d min lowest pos.	12	16
e max height	10	10
f min height	3	3

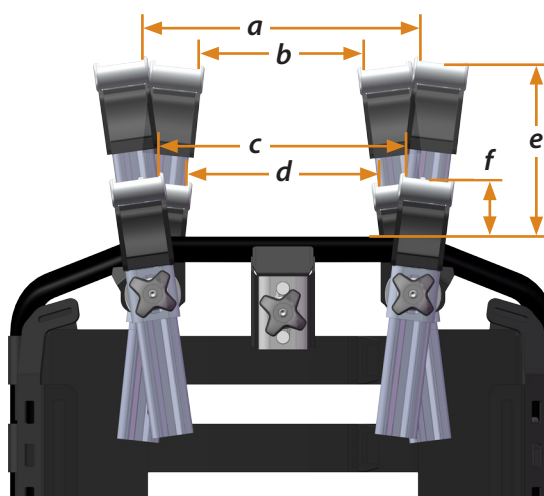

Keep in mind

- A harness must always be used together with a positioning belt for the pelvis.
- A harness is not a substitute for a safety belt for vehicle transport.
- Special restrictions on the use of harnesses may exist. For more information contact the appropriate board of health and welfare.
- The prescriber must always complete a risk assessment for the use of a harness for the individual user.
- The manufacturer of the harness has the responsibility that the harness is safe to use. See the user manual for the harness being used to see how it should be positioned on the user.

Article Numbers

All article numbers are included in the Prescription Form, document number 96750-1.

Also read *Changes permitted while maintaining CE-marking*, doc. nr. 96724-1, and *List of combination agreements*, doc. nr. 95232.